NANO³

Flight recorder (including NanoConfig configuration program)

Version 2.01





		lx nav
1 In	nportant Notices	5
1.1	Limited Warranty	5
1.2	Battery information	6
1.2	2.1 Disposal of Old Electrical & Electronic Equipment	6 7
1.2	2.2 Disposal of waste batteries	
2 Pa	ncking Lists	8
3 Ba	asics	9
3.1		9
3.2	Technical data	10
3.3		10
	Four push buttons	11
	LEDs	11
3.6	NanoPower cable 5.1 Available cables for NanoPower	12
		13 14
-	peration Powering on	14
4.1 4.2	Powering on Normal operation	15
4.3	Battery status	18
	3.1 Calibration of battery	18
4.4	Powering off	19
4.5	Security void	19
4.6	Charging battery	19
4.7	Connecting to a computer	19
4.8	Downloading flights	21
4.9	Bluetooth pairing	21
	Storing Nano	21
	Replacing the battery	22
	orking with the NANO ³	23
	Tree structure	23
5.2	Main navigation screen description	23
5.3	Info screen	24
5.4	Flarm screen	24
5.5 5.6	Waypoint screen Task screen	24 24
5.7	Setup Menu	24
	7.1 QNH	24
	7.2 Flight recorder	25
	7.3 Display	25
5.7	7.4 Graphics	26
5.7	7.5 Warnings	27
5.7	7.6 Obs. Zones	27
	7.7 Hardware	28
	5.7.7.1 Flarm	28
	5.7.7.2 Vario	28
	5.7.7.3 Communication	29
	5.7.7.4 ENL	29
	5.7.7.5 Sounds	29
	7.8 Files 7.9 Units	29 30
	7.10 Password	30
	7.10 Password 7.11 About	30
	7.11 About 7.12 Shutdown	30

	lx nav
6 Flarm on NANO ³	32
6.1 Connecting FlarmMouse to NANO ³	32
6.2 Connecting Flarm to NANO ³	33
6.3 Connecting Flarm to NANO ³ using NanoPower-FL	33
6.4 Connecting Flarm to NANO ³ using NanoPower-PF	
7 Configure NANO ³	34
7.1 Directly On NANO ³	34
7.1.1 Pilot information	34
7.1.2 Declaration and editing of a task	34
7.2 On a PC with NanoConfig for Windows	35
7.2.1 Using the Nanoconfig program	36
7.2.1.1 Pilot information	36
7.2.1.2 Task declaration	36
7.2.2 Changing parameters with NanoConfig	37
7.2.2.1 Flight recording interval	37
7.2.2.2 Automatically finish flight	37
7.2.2.3 Start recording on power on	37
7.2.2.4 Automatically turn off Nano, when flight is finish	
7.2.2.5 Bluetooth	38
7.2.2.6 NMEA output	38
7.3 Using Bluetooth or serial interface	38
7.4 NANO3 config for Android devices	39
7.4.1 Connecting and pairing the NANO	39
7.4.2 Main page	39
7.4.3 Downloading flights	39
7.4.4 Editing pilot info	40
7.4.5 Editing task for declaration	40
7.4.6 Configuring NANO ³	40
8 Troubleshooting	41
9 Pavision History	42



1 Important Notices

Information in this document is subject to change without notice. LXNAV reserves the right to change or improve their products and to make changes in the content of this material without obligation to notify any person or organization of such changes or improvements.



A Yellow triangle is shown for parts of the manual which should be read very carefully and are important for operating the NANO³ flight recorder.



Notes with a red triangle describe procedures which are critical and may result in loss of data or any other critical situation.



A bulb icon is shown when a useful hint is provided to the reader.

1.1 Limited Warranty

This NANO³ product is warranted to be free from defects in materials or workmanship for two years from the date of purchase. Within this period, LXNAV will, at its sole option, repair or replace any components that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts and labour, provided that the customer pays for shipping costs. This warranty does not cover failures due to abuse, misuse, accident, or unauthorized alterations or repairs.

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

IN NO EVENT SHALL LXNAV BE LIABLE FOR ANY INCIDENTAL, SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES, WHETHER RESULTING FROM THE USE, MISUSE, OR INABILITY TO USE THIS PRODUCT OR FROM DEFECTS IN THE PRODUCT.

Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you. LXNAV retains the exclusive right to repair or replace the unit or software, or to offer a full refund of the purchase price, at its sole discretion. SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF WARRANTY.

To obtain warranty service, contacts your local LXNAV dealer or contact LXNAV directly.



1.2 Battery information

NANO³ is powered by a rechargeable battery. The battery can be charged and discharged hundreds of times, but it will eventually wear out. Only use the approved battery and recharge your battery only with approved chargers.

Unplug the charger from the electrical plug and the device when not in use. Do not leave a fully charged battery connected to a charger as overcharging may shorten its life. If left unused, a fully charged battery will lose its charge over time. Use the battery only for its intended purpose. Never use a charger or battery that is damaged.

If the battery pack is mishandled, the battery pack can burst, cause a fire or even chemical burns. Observe the following precautions.

- Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F) such as in direct sunlight or in a glider parked in the sun.
- Do not incinerate.



- Do not handle damaged or leaking lithium ion batteries.
- Be sure to charge the battery pack using the supplied battery charger or a device that can charge the battery pack.
- Keep the battery pack out of the reach of small children.
- Keep the battery pack dry.
- Replace the battery pack only with the same or equivalent type recommended by LXNAV.
- Dispose of used battery packs promptly as described in these instructions.

1.2.1 Disposal of Old Electrical & Electronic Equipment

(Applicable in the European Union and other European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of

this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.



1.2.2 Disposal of waste batteries

(Applicable in the European Union and other European countries with separate collection systems)



This symbol on the battery or on the packaging indicates that the battery provided with this product shall not be treated as household waste. By ensuring these batteries are disposed of correctly, you will help prevent potentially negative consequences for the environment and human health which could otherwise be caused by inappropriate waste handling of the battery. The recycling of the materials will help to conserve natural resources.

In case of products that for safety, performance or data integrity reasons require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery will be treated properly, hand over the product at end-of-life to the applicable collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the applicable collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product.

(Applicable for Customers in the U.S.A. and Canada)



Lithium-Ion batteries are recyclable. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit http://www.rbrc.org/



Do not handle damaged or leaking Lithium-Ion batteries.



Packing Lists 2

In the box you will find:
 NANO³ flight recorder with preloaded Nanoconfig program and user manual



NanoPower cable



USB cable



Wall charger



- Barogram calibration chart
- Quick reference chart



3 Basics

3.1 NANO³ at a glance

The NANO³ flight recorder is the smallest flight recorder designed in accordance with the IGC "All Flights" specification. It has an IGC approval for all flights including world records. It features an integrated 56-channel GPS receiver with built-in antenna, altitude sensor, ENL sensor, security micro-switch, Bluetooth module and 1800mAh battery.



The operational temperature for the NANO³ is from $-20^{\circ}\text{C}(68^{\circ}\text{F})$ to $+60^{\circ}\text{C}(140^{\circ}\text{F})$. Higher temperatures may cause the battery to inflate.

The built-in battery allows up to 25 hours of stand-alone operation. The battery can be charged when the flight recorder is connected to a computer, NanoPower or wall charger. Bluetooth is used for easy data exchange with a PDA.



The housing is made of robust ABS plastic. On the left side of the unit there is a rocker button and five status LEDs. LEDs display the operational status.

A 4 GB solid state disk is used for flight data storage. Flights are stored directly in IGC format and are downloadable through a USB connection which is compatible with all operating systems (MS Win, Linux and Mac OS).



On the right side of the unit there is a small hole with a reset button. Use a pin to press the reset button if a reset is required. In normal operation, this button should never be used.





At the back of the unit there is a mini USB connector, this is used for charging and data transfer.

The internal solid state disk is preloaded with the Nanoconfig program. This program is used for uploading a flight declaration and/or changing the settings of the NANO³. Flight declarations can also be uploaded using a serial interface cable or Bluetooth connection. (See chapter 0 for more details).

3.2 Technical data

Hardware

- ARM M4 core processor
- 4GBytes memory solid state disc
- QVGA 320*240 colour pixel TFT sunlight readable transreflective LCD
- Three direction rocker button and four push buttons
- 56-channel GPS receiver
- Engine noise level sensor
- Pressure altitude sensor measuring up to 16000m

Input and output

- USB interface (mass storage device)
- Serial RS232 interface for PDA connection
- Bluetooth interface for PDA connection

Size and weight

• Outline dimension: 65x42x27mm

Weight: ~76g

3.3 Rocker button

The rocker button has several actions; you can press it or move it left or right.



A press or movement of the rocker button and the NANO³ flight recorder will power on. Press the rocker button for a long time and the NANO³ flight recorder will switch off. When flying, a press of the button for a short time and a pilot initiated event will be recorded and the flight recorder will then log 30 fixes with a recording rate of one second.

Moving the rocker button will increase or decrease the sound volume when on an info page. On pages with the map, the rocker button has a zoom function.

In the setup page, you can move through each menu and make changes



3.4 Four push buttons

Nano³ has four push buttons, which have a dynamic function.



The function of each push button is described on the blue label adjacent to the button. A label can have two options with the second option coloured red on the label. This indicates that the button has two functions. The blue option is operated with a short press and the red option with a long press. For labels with two options, the second option is typically the opposite function of the first option. e.g. Next/Previous, Insert/Delete, Ok/Cancel, forward/backward.

The functions of buttons are mostly related the current page (waypoint, task, flarm, info, setup). If there is no label next to the button, this button has no function.



3.5 LEDs

On the left side there are five LEDs; three green, one blue and one red. The LEDs show the status of the NANO³ flight recorder. During normal operation, the first LED blinks when the NANO³ is powered on. The second LED blinks when the GPS status is ok. The third LED blinks when the recording of a flight is started. The fourth blue LED blinks when the Bluetooth module is switched on.







LEDs show the status only when the LCD is off.

3.6 NanoPower cable

The NanoPower cable is a special device which converts 12V to 5V providing a power supply for the NANO³ and a PDA. It also translates a serial signal to match the NANO³ signal level and a PDA or computer signal level.



Connect the red and black wire to 12V power supply. Red is positive.



Maximum input voltage is 24 Volts.


The NanoPower has two plugs. On one side there is a standard USB-A connector. Please use the included USB-A to mini-USB cable and plug the NANO³ on this side. Any standard USB-A to mini-USB cable can also be used. On the other side there is an RJ45 plug. This plug is designed for a PDA or a computer.



The RJ45 plug is NOT designed in accordance with the IGC standard. It can be used only with a dedicated cable. Do not plug any unknown cables in to it as this may damage the NanoPower circuit.



Pin description on the NanoPower RJ45 is given in the picture below.

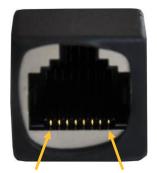

1 2 3 4 5 6 7 8 Pin numbers

Pin number	Description
1,2	Ground
3	(output) Transmit from NANO ³ RS232 (e.g. Computer, V7)
4	(input) Receive to NANO ³ RS232 (e.g. Computer, V7)
5	(output) Transmit from NANO ³ LVTTL (e.g. Oudie, HP302)
6	(input) Receive to NANO ³ LVTTL (e.g. Oudie, HP302)
7,8	5V OUTPUT (maximum 1A)

3.6.1 Available cables for NanoPower

Device	Cable code
OUDIE	CC-NP-OUDIE1
Generic RS232 with female DB9	CC-NP-232
IPAQ 310/314	CC-NP-IPAQ310
IPAQ 38/39xx/47xx	CC-NP-38
MiniMap	CC-NP-LX
Butterfly Connect	CC-NP-BFC
Flarm	CC-NP-IGC
Nanopower for PowerFlarm	NanoPower-PF
Nanopower for Flarm	NanoPower-FL



4 Operation

There are two modes of operation: **Data transfer** mode and **Normal operation** mode.

When in the data transfer mode, flights can be downloaded and the NanoConfig program can be run. Normal operation mode is when the logger is ready for recording flights.

The mode in which the NANO³ is operating can be determined from the main screen or LEDs, when the screen is off.

In **data transfer mode**, the last two or three green LEDs will be permanently lit, on the screen, there will be a message "USB connected", whereas in the **normal operation mode**, up to four LEDs will be blinking, or the screen will display data only. See chapter 4.2 for a detailed explanation of each LED.

4.1 Powering on


There are three ways to power on the NANO³ flight recorder.

Press or rock the rocker button and the NANO³ will power on. It will go directly to normal operation mode. On startup, a splash screen will appear with information containing the Serial number and version of firmware. The NANO³ will then go into normal operation mode.


Connect the NANO³ **to a computer using a USB cable.** It will automatically power on and the last two or three LEDs will light up. At the same time you will see the first message "USB connecting..." and later "USB connected", when the connection is established. This indicates that the NANO³ flight recorder is in data transfer mode. You may now run the NanoConfig program or copy flights using standard methods for copying files.

Connect the NANO³ to **NanoPower cable.** The NANO³ will then automatically power on and after approximately 20seconds the NANO³ will go into normal operation mode.

Normal operating mode starts with a message "Acquiring time" and "Acquiring GPS fix".

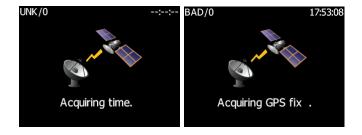

When the NANO³ acquires a GPS fix, it will switch to the GPS info page. The user can at any time, cancel the acquiring page by pressing any button. Acquiring a GPS fix may take between a few seconds and a few minutes, depending on the satellite constellation and the NANO³ position. The NANO³ has a very sensitive GPS receiver which can sometimes acquire a GPS satellite signal in a room.

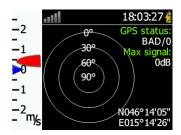





If you press or move the rocker button or any other buttons, when in the data transfer mode, the NANO³ will revert to normal operation mode

4.2 User Input

The NANO³ user interface consists of many dialogues, which have different input controls. They are designed to make input of names, parameters, etc., as easy as possible. Input controls can be summarised as:

- Text editor
- Spin controls (Selection control)
- Checkboxes
- Slider control
- Line width control
- Color selection

To move the function from one control to another, use **up** or **down** buttons. By pressing the **Edit** button access to the control that is displayed is possible.



4.2.1 Buttons on Nano3

Buttons have dynamically set functions. When you press a button, on the button side, will appear a blue labels, with the action assigned to that button in that context.

On main screen, top button always performs the function of switching between pages. Short press will cycle in one direction between pages, long press will cycle in the opposite direction between pages. A number of pages look similar initially as the cycling between them simply change the zoom level. The screen will momentary will be updated to reflect the new zoom level. The number in a zoom level icon shows us the outer circle radius (2km – depends on distance units setting). Inner circle is half of that distance.



Middle buttons help with target selection by cycling through available targets. Lower button has EDIT function, where we can edit/view the currently selected target.



4.2.2 Text Edit Control

The Text Editor is used to input an alphanumeric string; the picture below shows typical options when editing text. Use the up/down button to change the value at the current cursor position.




Push button **next** will move cursor right. Long press on **next**, will move cursor left. At last character position, push button will confirm edited value, long press **Ok C**) will cancel editing and exit that control. If Long press is available, part of button label is in Gray color. For example above, top button's long press **>> B** has back function. Bottom button's long press has Cancel function. Flarm ID field is not editable, because it's unique flarm identification number.

On FlarmView57, we can enter in Edit mode with short press, rotating knob we can change the characters, short press will confirm current character and jump to the next position. Long press will finish editing that field. With push and rotate, we can move cursor left and right.


4.2.3 Selection Control

Selection boxes, also known as combo boxes, are used to select a value from a list of predefined values. Use the up/down buttons to select the appropriate value.

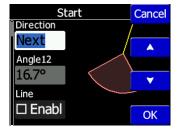

4.2.4 Line width selection

SLine width boxes, are used to select a line width from a list of predefined widths. Use the up/down buttons to select the appropriate width.

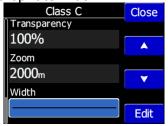



4.2.5 Color selection

Color selection boxes, are used to select a color from a list of predefined colors. Use the up/down buttons to select the appropriate color.




4.2.6 Checkbox and Checkbox List

A checkbox enables or disables a particular parameter. Press **EDIT** button to toggle the value. If an option is enabled a check mark will be shown, otherwise an empty rectangle will be displayed.



4.2.7 Slider selector

Some values like volume and brightness are displayed as a slider

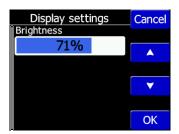


With **Edit** you can activate slider control, then **up/down** buttons you can select the preferred value and confirm it with the **Ok** push button.

4.3 Normal operation

During normal operation mode, the user can use the NANO³ as a flight recorder, simple navigation, vario system and Flarm radar display. There are four pages (information page, waypoint page, task page, setup page and flarm radar). You can read more about pages in Ch.5.1. If the screensaver function is enabled, the screen will go off after the set time period in seconds. When the screen saver is on, the pilot can still see the indicated status of the NANO³ by monitoring the five LEDs. The first LED blinks when the NANO³ is powered on. The second LED blinks when the GPS status is ok. The third LED blinks when flight recording has started. The fourth blue LED blinks when the Bluetooth module is switched on.



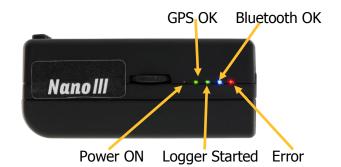

The fifth LED is red and indicates an error. See chapter 8 for more details.

4.4 Battery status

The battery status is indicated with LEDs only in fast charge mode. Ch.4.7 If all the LEDs are on, it means that the battery is fully charged. During operation, as each LED goes out it means 20% less battery capacity remains. A Detailed explanation of the LEDs is given in the table below.

PWR	GPS	LOG	ВТ	Err	Description
£	•	•	•	•	100% full, approximately 28hours of operation
•	•	•	•	•	95% full, 27hours remaining
	•	-	-	0	80%, 22hours remaining
		0	(-)	0	60%, 17hours remaining
			-	0	40%, 10hours remaining
				•	20%, 5hours remaining
				\$ \$	5%, 1hour remaining

From version 2.0 NANO³ is able to measure battery level more accurately. This means it can calculate the remaining time of working based on the current consumption rate. It is possible in some circumstances for the accuracy of this calculation to drift so there is a

4.4.1 Calibration of battery

Battery can be calibrated in the following way.

1. NANO³ must be fully charged

built in ability to re calibrate the battery.

- 2. NANO³ is fully charged, when charge current drops below 5mA
- 3. Disconnect the supply cable and leave the NANO³ running until it shuts down due to an empty battery



To be sure, that the NANO³ is really in discharge mode, the bottom row of the INFO page text will show "DIP", which means Discharge In Progress.





We can increase the speed of the discharge cycle, if we turn on BlueTooth module, set up brightness of LCD to maximum, turn off screen fade.

After this procedure NANO³ has measured its battery capacity and with the next charge, the indication will be more accurate.

4.5 Powering off

Press the rocker button for a long time and the red LED and the adjacent green LEDs will start blinking. Once you see the LEDs blinking you may release the button and the unit will power off.

4.6 Security void

When the security (secret key) is lost at power on, the red light will be on and the remaining four green LEDs will start blinking and "DIGITAL SIGNATURE FAILED" message will appear on the screen. To continue press or move the rocker button for a longer period. The NANO³ will be fully functional, however the flight will not be signed.



In order to produce the IGC-certified files, the NANO³ flight recorder must be returned to the dealer or manufacturer for resealing.

4.7 Charging battery

The battery will be charged when the NANO³ is connected to the external power through a usb port. It can be charged from a wall adapter, or directly from a PC or from the NANO³ power cable.

If you want to charge faster, then you must connect the NANO³ to a power supply, wait for it to boot up, then press the rocker button to switch the unit off. In this mode all the NANO³ functions (GPS, Bluetooth, Memory) are turned off, this will increase the charging speed. In this mode the NANO³ can be fully charged in approximately 5 hours. The LCD screen is still on, but the backlight is off. It is still possible to monitor the level of charge. The level of charge is also visible via the LED indicators. More information on charge level and LED indication in chapter 4.4.




Sometimes it may appear that the NANO3 battery level when connected to a charger, looks full. When you then disconnect the power, the battery level drops to 90%. This is normal as the battery level indication is different when the charger is connected and when it is disconnected. To really fully charge the Nano3, please continue charging for a few hours. In fast charge this time will be shorter.

4.8 Connecting to a computer


Before connecting the NANO³ to a computer, you must turn it off.



Connect it to a computer using the supplied USB cable or any other standard USB-A to mini-USB cable. The NANO³ flight computer will be identified automatically and a new removable storage device will be indicated. The name of the device will be NANO3_<SERIALNUMBER>.

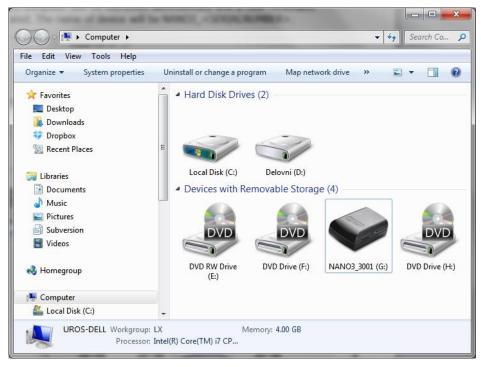

Open this device to see its content.

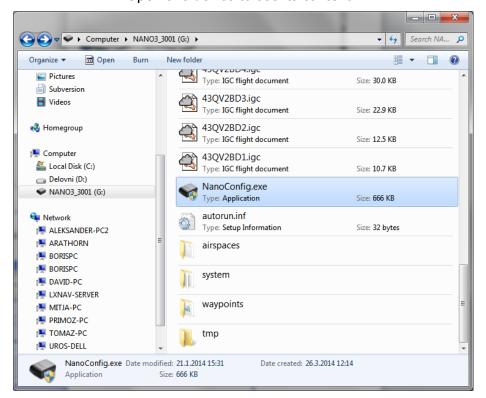

In the root folder you will find the flights created by the NANO³ and the NanoConfig program. The NanoConfig program will run only on Microsoft Windows operating systems. Double click to run it.






On the first connection of the NANO³ to a computer, it may not be recognized immediately. Disconnect the NANO³ from the computer and connect it again in order for it to be recognized.

4.9 Downloading flights

Turn off the NANO³ and connect it to a computer using a USB cable. Navigate to the root folder of the NANO³ and use your preferred method of copying files.

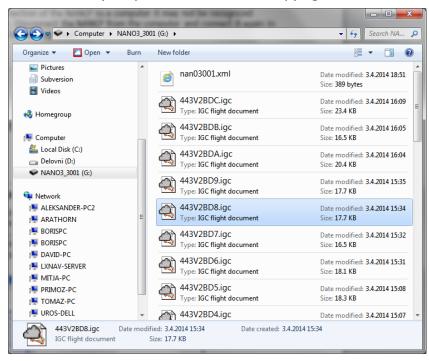

Flights are stored in files with the IGC standard filename. If you find it difficult to decode this standard, we recommended that you switch to detailed view to see the date of the file. In detailed view, the file date and time shows the landing time of the glider.

Flights can also be downloaded using the NanoConfig for Android devices. More details are in Ch.7.4.

4.10 Bluetooth pairing

In order to connect to the NANO³ via Bluetooth you have to search on a PDA for Bluetooth enabled devices in range. (See chapter 0 to enable Bluetooth) The NANO³ will be identified as LXNAV-NANO3-<SERIALNUMBER>. Click PAIR or CONNECT to connect to the NANO³. A security pin must be entered. The pin code for the NANO³ is 1234 and cannot be changed.

4.11 Storing Nano

The NANO³ must be stored in a dry environment with temperature lower than 25°C (77° F). If the NANO³ will not be used for an extended time, it is recommended that you charge the battery to 50% beforehand.

The NANO³ and the BATTERY have protection circuits which protect the battery from being overcharged or overly discharged. If the NANO³ is stored with an empty or near empty battery, eventually the battery will be discharged so far that it will not be possible to charge it again.



4.12 Replacing the battery

The battery can be replaced by the user. You will need a screwdriver with cross head (Phillips). Unscrew the three screws.



Open the cover and remove the battery.



Insert a new Nokia 3310 battery (Li-Ion). Make sure that the contacts are properly aligned. Close the cover and put back the three screws gently.








5 Working with the NANO³

5.1 Tree structure

The NANO³ has four modes, info, Waypoint, Task and Setup mode. Info mode has two subpages, where you will find all the necessary information about the status of the NANO³.

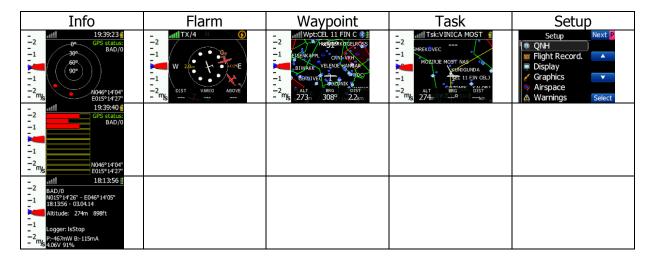


5.2 Main navigation screen description

The main navigation screen consists of a map with coloured airspace, waypoints with names or task (depends on which page you are looking at), vario tape on the left and status bar on the top. The vario tape and vario dynamics can be configured in the Setup-Hardware-Vario menu. If you don't want to see the vario tape, you can switch it off. The status line indicates the status of the GPS, indicates the chosen waypoint that you are navigating to, the status of the Bluetooth device and the battery level. Menu buttons appears, when you press any one of the buttons. Each button has its own function which is described on the button label. The functions of buttons are mostly related to the page where you are (waypoint, task, flarm, info, setup). If there is no label on the button, this button has no function.

Battery level can be displayed in two ways, with the classic battery level indicator or round progress with number inside , which indicates remaining hours. Outside progress indicates percent of the battery level. When the remaining time is calculated to be less than 1 hour, the indication becomes red and the inside number means remaining minutes, the outer ring is progress for last hour (60 minutes).

When the battery is charging the indication is as follows: 2. Inside symbol indicate charging, outer ring is percent of charge.

The accuracy of battery life measurement depends on how accurate the battery capacity has been measured More about battery calibration can be read in chapter:4.4. In the centre top of the map is the "off course" indicator, which helps the pilot fly in the right direction. At the bottom of the map screen are three nav boxes, showing bearing, distance to the target and the pressure altitude.

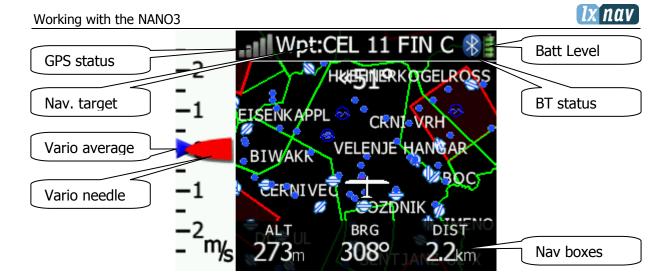

Final glide calculations will be available in version 3.0

5.3 Info screen

On the info screen, is available data about GPS, Battery and Flight recorder status

5.4 Flarm screen

Is visible only when the Nano3 detects a flarm connected to the external port. Selection of flarm targets and zooming is then available. If the Nano3 is connected to PowerFlarm, it is also able to show PCAS traffic.

5.5 Waypoint screen

In this screen, the pilot can navigate to a selected waypoint, **Select** waypoint from opened CUP file, or select landable waypoint from near list **Near w**.



5.6 Task screen

In this screen user can navigate to waypoints from a task, switching between them, edit task points and their zones. More on Ch. 7.1.2

5.7 Setup Menu

5.7.1 QNH

Under this page, the pilot can change the QNH setting. If QNH setting is correct, Nano³ will show correct altitude.







Wrong QNH setting will have effect only on wrong altitude warnings. QNH setting has no influence over the recorded altitude in the IGC file

5.7.2 Flight recorder


Under this page; flight recorder, pilot information and glider data are configured.

- **Recording interval** sets the interval when the GPS position will be stored in flight
- Auto Finish will allow the automatic finish of the flight, under certain conditions.
 Uncheck this item for wave flying. (ground speed is used to indicate the end of a flight and in wave it is possible to be stationary or even fly backwards in relation to the ground)
- Auto Off will power off the NANO³ 30 minutes after the flight is finished
- Logger always on will force the logging/write position to an IGC file immediately
 after power on. Normally the NANO³ logger is triggered by ground speed exceeded
 40km/h or vario over 1m/s. This function is recommended to be enabled only for
 hang gliders.
- Pilot name must be entered here
- **Co-Pilot** name must be entered here, if glider is doubleseater.
- Competition sign of glider
- Registration of glider
- Glider type
- Glider class



5.7.3 Display

Under this menu the following items can be set:

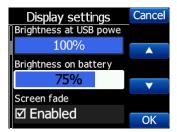

 Brightness at USB power will set the level of backlight, when USB power is present



- Brightness on battery will set the level of backlight, when USB power is not present
- Screen fade enables fading screen to level "Fade brightness" after "Fade Timeout" time
- Screen off enables power off of the screen after "Off timeout" seconds.
- Wake screen on events enables turning on the screen, even if the screen is off

5.7.4 Graphics

Graphics has many sub items which are related to **Map, Airspace, Waypoints, Glider, Task, Flarm** and theme setting.



5.7.5 Warnings



altitude warnings, **flarm warnings** and their conditions can be setup under this menu.

5.7.6 Obs. Zones

This menu defines the default observation zone geometry. The following items can be chosen: start zone, turn point zone and finish zone.



Each type of observation zone is defined with two angles, two radii and mean bearing (**Angle12**). These parameters enable the creation of any known zone geometry separately for start, turn point and finish.



Using parameters in the zone dialogue it is possible to describe all types of observation zones. **Angle12** defines the orientation of the observation zone. Available values for **Direction** are:

- **Symmetric:** This is the most common selection for turn point.
- **Fixed**: This is mostly used for assigned areas.
- Next: will orient the observation zone in direction of the outgoing leg. This is usually used for start.
- Prev: will orient the zone in direction of the incoming leg and is usually used for the finish.
- **Start:** orientates the sector always towards the start.

If the **Line** checkbox is checked the sector will become a line type of observation zone. The **Radius 1** parameter describes half of width of line length. Use the UP/DOWN arrow buttons to increase or decrease radius for step 0.1. Long press will increase/decrease for 5.0.

If **Line** is not checked the **Angle1** parameter will define the basic shape of the observation zone. A value of 180° means that the zone is a cylinder and 45° is the classical FAI sector.



Use Up/Down buttons to select right angle.

Angle2 and **Radius2** are used for more complex observation zone setups.

When changing observation zone parameters the screen is automatically updated to display the new zone.

5.7.7 Hardware



In the Hardware menu there are four sub items:


5.7.7.1 Flarm

If a flarm is detected, the user can make some configuration setting changes on the flarm and get some flarm status information .





5.7.7.2 Vario

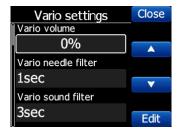

Vario submenu allows you to adjust the **Vario filters** for the **Vario needle** and the **vario sound**, the time constant for **average vario** and vario tape **range**.




5.7.7.3 Communication



In the communication menu, you can enable or disable the **Bluetooth** device, enable or disable **NMEA output** on the USB port, **baudrate** for external serial interface and the optional menu for changing the **bluetooth password** which you need to enter on the host device when you want to pair with the NANO³. The default password for pairiong is set to 1234.

5.7.7.4 ENL

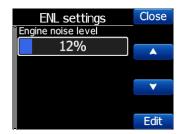

This page is just for monitoring the engin noise level.

5.7.7.5 Sounds

In this menu various setting for sounds can be adjusted. **Volume** of vario sound, enabling of **system sounds** and enabling of **vario sounds**. From version 1.5 here is also sound setting for Flarm warning.





Vario volume can also be adjusted using rocker button, but only in GPS info page.

5.7.8 Files






Airspace and **waypoints** files can be selected here. The NANO³ supports **CUP** file format for waypoints and **CUB** file format for airspace. There is no limitation in file size or number of waypoints, but reducing the size of the airspace area or number of waypoints, performance of the NANO³ will be better.

In the same section you can convert all IGC files loaded on the NANO³ to KML file format. FlarmNet data can be loaded also in this section and is useful only if flarm is connected to NANO³

5.7.9 Units

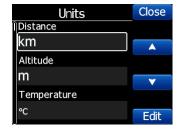

In this menu can be set the units for speeds, distances, altitudes,

5.7.10 Password



The password menu is only used for maintenance at this time. There are no passwords available for users at the moment.

5.7.11 About





Under about menu, user can see the version and serial number of the NANO³

5.7.12 Shutdown



Pressing the button adjacent to this item on the NANO³ screen will shut down the NANO³ after confirmation.




6 Flarm on NANO³

NANO³ is able to display flarm and PCAS traffic on map or on radar screen. Radar screen is visible only when Flarm is detected by NANO³. In case of collision warning, another screen will be displayed, which will inform us, from which direction the threat is coming from.




PCAS alerts on the map are represented as a dotted circle with relative altitude, the PCAS warning is represented as lights on the clock as red or orange.

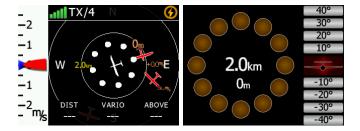


Flarm warning can be dismissed with a short press of any button. Dismiss time can be configured in setup.

6.1 Connecting FlarmMouse to NANO³

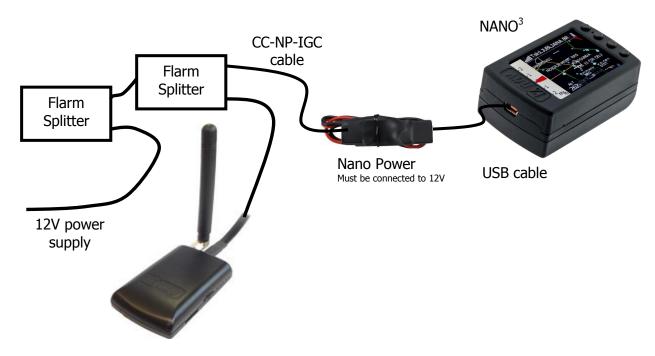



6.2 Connecting Flarm to NANO³

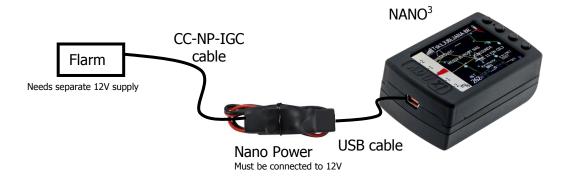

6.3 Connecting Flarm to NANO³ using NanoPower-FL



6.4 Connecting Flarm to NANO³ using NanoPower-PF





7 Configure NANO³

Flight declarations can be uploaded to the NANO³ in four different ways:

- Directly on the NANO³
- Using the NanoConfig program on PC,
- Bluetooth (NanoConfig for Android, Oudie, XCSoar,..)
- Serial interface (PDAs, Oudie, XCSoar)

Declarations are stored in the SYSTEM folder in a file called **decl.** The declaration file is formatted as a standard IGC header file. It is recommended that you do not try to modify this file yourself.

7.1 Directly On NANO³

7.1.1 Pilot information

Detailed information is written in Ch.5.7.1

7.1.2 Declaration and editing of a task

In the Task page, the user can enter or edit the task, which will then be automatically declared when you leave this page. Waypoints can be loaded into a task from the active waypoint file.



A Task can be entered in a very simple way. In the task page you can press the **edit** button. Using the up or down button you can highlight an existing waypoint or empty space and then set a new waypoint. By pressing the **Ins**. (insert) button you can start browsing through all of the waypoints in the selected CUP file.

Selecting from a list of waypoints is very intuitive. The NANO³ will only offer you a choice of characters that are available from the list of waypoint names available. Using the button >> you can move to the next character (right), the red part of the label indicates one space back or one character to the left uning a longer press of the button. A similar function for the button, where you can confirm a selected waypoint or with the , you can cancel the selection of a waypoint. The previous waypoint will then be selected.



When you are back in the Task menu, you can **Ins**ert or **delete** waypoint.









To *insert* a waypoint you make a quick press on the **Ins.** and to *delete* a waypoint you press and <u>hold down</u> \square for about (not more than) a second

Each waypoint can have a custom zone or area applied. These areas can be modified by pressing to Zone button.

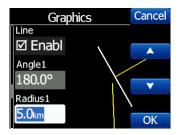

7.2 On a PC with NanoConfig for Windows

Use the NanoConfig program to configure the NANO³. A flight declaration can be uploaded or various parameters can be modified using this program. The NanoConfig program consists of two major screens. A flight declaration screen and a settings screen.

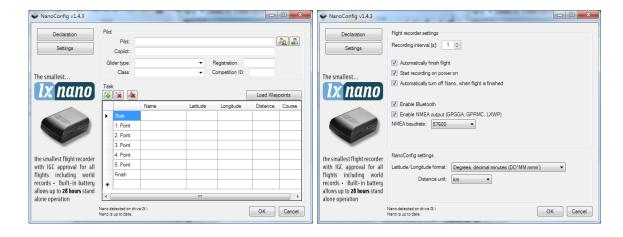

You may toggle between these two screens by pressing the **Declaration** or **Settings** button in the upper left corner of the NanoConfig program.

Press the **OK** button to confirm changes and exit from the program. Press **Cancel** to abandon changes and exit without saving data.



It is important to run the NanoConfig program directly from the NANO³. Do not copy the NanoConfig program to another location as the settings and declarations will not be written properly to the NANO³.




The version of the program is written in the lower left corner of the NanoConfig window. When requesting support from LXNAV or reporting a bug, please always include the version of the program in your email.



All NANO³ configuration variables are stored in the SYSTEM folder of the NANO³ in a file named "system.ini". It is strongly recommended that you do not modify this file yourself. If you need more information about the "system.ini" file please contact us.


7.2.1 Using the Nanoconfig program

Run the NanoConfig program and go to the declaration screen. The declaration screen is split into two groups. Pilot and glider related information is in the top group and the task declaration is shown in the bottom group.

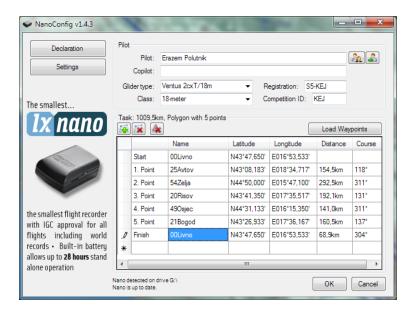

7.2.1.1 Pilot information

Enter pilot and glider information in the pilot section. In the top right you will find two icons. The first icon will show a list of stored pilot information and the second will add the current pilot information to the list.

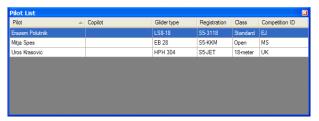

7.2.1.2 Task declaration


Before creating a task you have to load the waypoints from which the task will be created. Press the **Load Waypoints** button to load waypoints. Waypoints can be loaded from a CUP formatted file. Once waypoints are loaded you can create a task by typing the names of the waypoints. Use the icons in the upper left corner of the task declaration group to add or



delete a point or to clear the whole task. Task points can also be deleted by pressing the DEL key or can be inserted by pressing the INS key.

7.2.2 Changing parameters with NanoConfig

Run the NanoConfig program and go to the settings screen. The settings screen is split into two sections. Settings dedicated to the NANO³ and settings for NanoConfig.

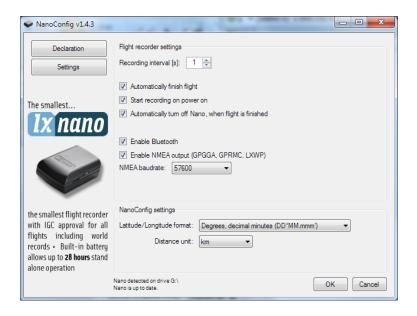

Parameters for the NANO³include recording interval, NMEA output and Bluetooth enable settings.

In NanoConfig you can change the distance units used in the task declaration and the format of latitude and longitude.

7.2.2.1 Flight recording interval

The flight recording interval is set to one second by default. It is recommended that you keep this setting. Even with the recording interval set to one second, the NANO³ is capable of storing approximately 28000hours of flight. Having a recording interval of one second will allow you to do more accurate post-flight analysis and increases the probability of obtaining a data point in the observation zone.

If you wish to change these settings, use the up/down arrow or type a new value.

7.2.2.2 Automatically finish flight

If this option is enabled, the flight will be automatically finished and digitally signed once conditions for finishing the flight are met. The NANO³ must fulfil the following conditions for 30 seconds. GPS status is ok, ground speed is below 4m/s, vertical speed is within 0.2m/s and altitude is below 3000m.

7.2.2.3 Start recording on power on

If this option is enabled, recording of a new flight will be automatically started when the NANO³ is powered on. If this option is disabled the NANO³ will start recording when vertical speed is above 1m/s and the ground speed is above 8m/s. This option is most useful for hanggliders.





When this option is enabled, option Automatically finish flight is ignored.

7.2.2.4 Automatically turn off Nano, when flight is finished

This option is very useful for NANO³ when installed more or less permanently into the glider. If this option is enabled, the NANO³ will automatically switch off 30 minutes after the flight is finished.

7.2.2.5 Bluetooth

Check the **Enable Bluetooth** checkbox if you want to turn it on. By default Bluetooth is disabled.



When Bluetooth is enabled, the NANO³ will consume more power and the total endurance of a new and charged battery will reduce approximately to 16 hours. Without Bluetooth enabled NANO³ can run up to 25 hours.

7.2.2.6 NMEA output

Check **Enable NMEA output** to output NMEA data. The NANO³ will transmit the following NMEA sentences GPGGA; GPRMC, LXWP0 every second and LXWP1 once per minute. NMEA can be output to either the serial interface or Bluetooth but not to both simultaneously.

Change the NMEA **baud rate**, if you want to output NMEA at different baud rates.

7.3 Using Bluetooth or serial interface

Flight declarations can also be uploaded using the serial interface or Bluetooth (See chapter 7.4.1 for Bluetooth pairing). The NANO³ must be running in normal operating mode.



When connecting through the serial interface, you should use the same baud rate as is set for NMEA output on the NANO³.

When connected through Bluetooth baud rates are not important.

Please refer to the manual for the software used to upload flight declarations. (E.g. SeeYou Mobile)



7.4 NANO3 config for Android devices

NanoConfig can be downloaded from LXNAV web site or Google Play Market. The NanoConfig is a configuration tool for the NANO³. The user can easily modify flight recorder parameters, edit pilot and glider information, edit the declaration, and transfer flights from the NANO³ to a smart phone.



NanoConfig consists of four tabs: Main, Logbook, Pilot, Task and Settings.

7.4.1 Connecting and pairing the NANO

When you run the NanoConfig on a smart phone, the program will first ask you to turn on Bluetooth, if it's not turned on already.

Over the menu button is access to the scan function, which will scan for BlueTooth devices. If the NANO3 is turned on and BlueTooth functionality in the NANO³ is enabled, it will appear on the scanned list. Choose nano. The first time it will be necessary to pair the NANO³ and the Smart Phone together. More about pairing in Ch.4.9.

7.4.2 Main page

On the main tab, information about the NANO³ and its GPS status.

7.4.3 Downloading flights

The first time you access this tab, NanoConfig will automatically start reading flights from the connected NANO³. Downloading always starts from the most recent to the oldest flight. If you have a lot of flights in the NANO³'s memory, the transfer of the logbook can be interrupted with the BACK button.






After downloading of the logbook data is finished, a short press on the desired flight will start the download process. If the flight size is big, the download may take more than minute. Flights are downloaded into the NanoConfig folder. With a long press on the flight, the downloaded flight can be shared with other applications installed on your smart phone (Gmail, SeeYou, OLC (not available), Google Docs, Facebook).

7.4.4 Editing pilot info

The Pilot tab can be used to edit information about the glider and crew.

7.4.5 Editing task for declaration

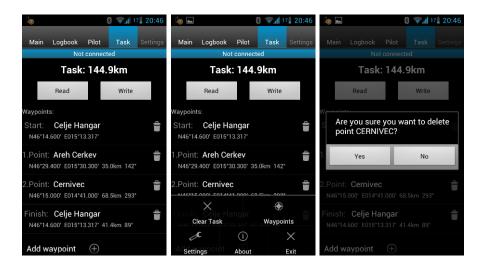

Editing the task is very simple. First is necessary to choose a waypoint file in the CUP (SeeYou) format. To select the CUP file, use the MENU button. Press the Add waypoint button to add the waypoint to the last position. A long press on the waypoint will give us an option to insert a waypoint. On the right hand side of waypoint name is the trash box. Press the trash box to delete the waypoint from the list. After a task has been entered, it can be transferred to the NANO³ by pressing the Write button.

7.4.6 Configuring NANO³

In this tab the recording interval, automatic power off, and NMEA settings can be configured.



8 Troubleshooting

Q: My computer does not recognize the NANO³ as a USB mass storage device?

A: Make sure that the NANO³ is turned off before connecting to the computer.

Q: When I power on see all green LEDs blinking and the red LED is illuminated.

A: This means that your flight recorder has lost security. Contact us for further details.

Q: When I power on I see one green LED and the red LED is illuminated.

A: There is a problem with internal Solid State Disc.

Q: Is the internal LiIon battery for the NANO³ end-user replaceable or would I need to send the unit back to LXNAV or a dealer to have the battery replaced?

A: User can replace the Li-Ion Battery. See chapter 4.11

Q: I can't read the NANO³ on my notebook.

A: Change power management scheme on your notebook, or connect notebook to power supply.

Q: When I connect the NANO³ to my notebook, message "USB device connected" would appear, disappear, appear, etc. from the laptop screen.

A: Change power management scheme on your notebook, or connect notebook to power supply.

Q: Can I open files from the NANO³ on the Apple computer?

A: Yes.

Q: I run Ubuntu on my laptop so cannot run NanoConfig.exe.

A: NanoConfig is Windows application, that runs only on windows operating system.

Q: Can I declare task with an OUDIE?

A: Yes, declaration can be done via serial cable or over BlueTooth. Please read step by step instructions

http://www.lxnav.com/downloads/manuals/FAQ Upload declaration from OUDIE%20to%2 ONANO.pdf

Q: When I run nanoConfig, I'm getting errors.

A: Probably Microsoft Net Framework is not installed.



9 Revision History

April 2014	Initial release of owner manual
Version 1.1	Corrected chapters: 5.7.1, 5.7.5
January 2015	Added chapter 3.6.1
April 2015	Release version 2.0
May 2015	Release version 2.01, Updated chapters 5.2 5.5 5.7.6
June 2105	Release version 2.03, Updated chapter 4.2